



Edition: A01

MoTix 1 H Installation Instructions



Important

To ensure the best printing effect, it is recommended to use the specified types of ink and parts.

Safety Instructions

To avoid accidents, personnel without professional training or authorization are prohibited from maintaining or disassembling & assembling the equipment.

The inkjet printer must be installed with ground wires, which must be confirmed to be reliably connected to the ground; failure to reliably connect the ground wire may frequently cause the equipment to malfunction.

Do not expose the ink to direct sunlight or high temperature environments (above 35°C); otherwise, the printing effect and useful life of the ink may be adversely affected.

If the ink accidentally splashes into the eyes or onto the skin during use, the eyes or skin must be rinsed immediately with clean water.

If ink leaks to the inkjet printer, please shut down the printer and turn off the power supply immediately; once the ink penetrates into the equipment, please entrust professionals to perform an inspection; otherwise, the equipment may get out of service.

Catalogue







Packing instructions	3
1.1 Parts List.....	3
Installation instructions	4
2.1 Battery Installation	4
2.2 Ink cartridge Installation (42ml)	4
2.3 Position Wheel Mechanism Replacement.....	5
2.3.1 Dual wheel mechanism removal and installation:.....	5
2.3.2 Four-wheel mechanism removal and installation:	6
Inkjet Printer Introduction	7
3.1 Printer	7

Packing instructions

Packing Picture	
Outer Box	

1.1 Parts List

Please check everything with packing list to make sure all required parts in the package when you receive the products.

SN	Part Name	QTY	Photo	Note
1	Handheld printer	1		
2	USB	1		
3	Battery	4		18650 Optional accessories
4	Charger	1		
5	Wrist Strap	1		
6	dual wheel mechanism	1		Optional accessories

Installation instructions

2.1 Battery Installation



Battery Installation: Insert the battery into the printer handle as shown in the left diagram. Close the battery compartment cover until you hear a "click" sound, indicating the batteries are securely fixed in place.



Battery Removal: Press the red switch button as shown in the diagram to open the battery compartment cover. Remove the batteries.

2.2 Ink cartridge Installation (42ml)



Cartridge installation: Insert cartridge to printer by an angle of 15 degree. Press vertical when insert right position, then hear "click", that means the cartridge already is fixed well.

Cartridge removal: Remove cartridge from printer by an angle of 15 degree.

2.3 Position Wheel Mechanism Replacement

2.3.1 Dual wheel mechanism removal and installation:



Well-installed dual wheel mechanism:



2.3.2 Four-wheel mechanism removal and installation:



Well-installed Four-wheel mechanism:



Inkjet Printer Introduction

3.1 Printer

